
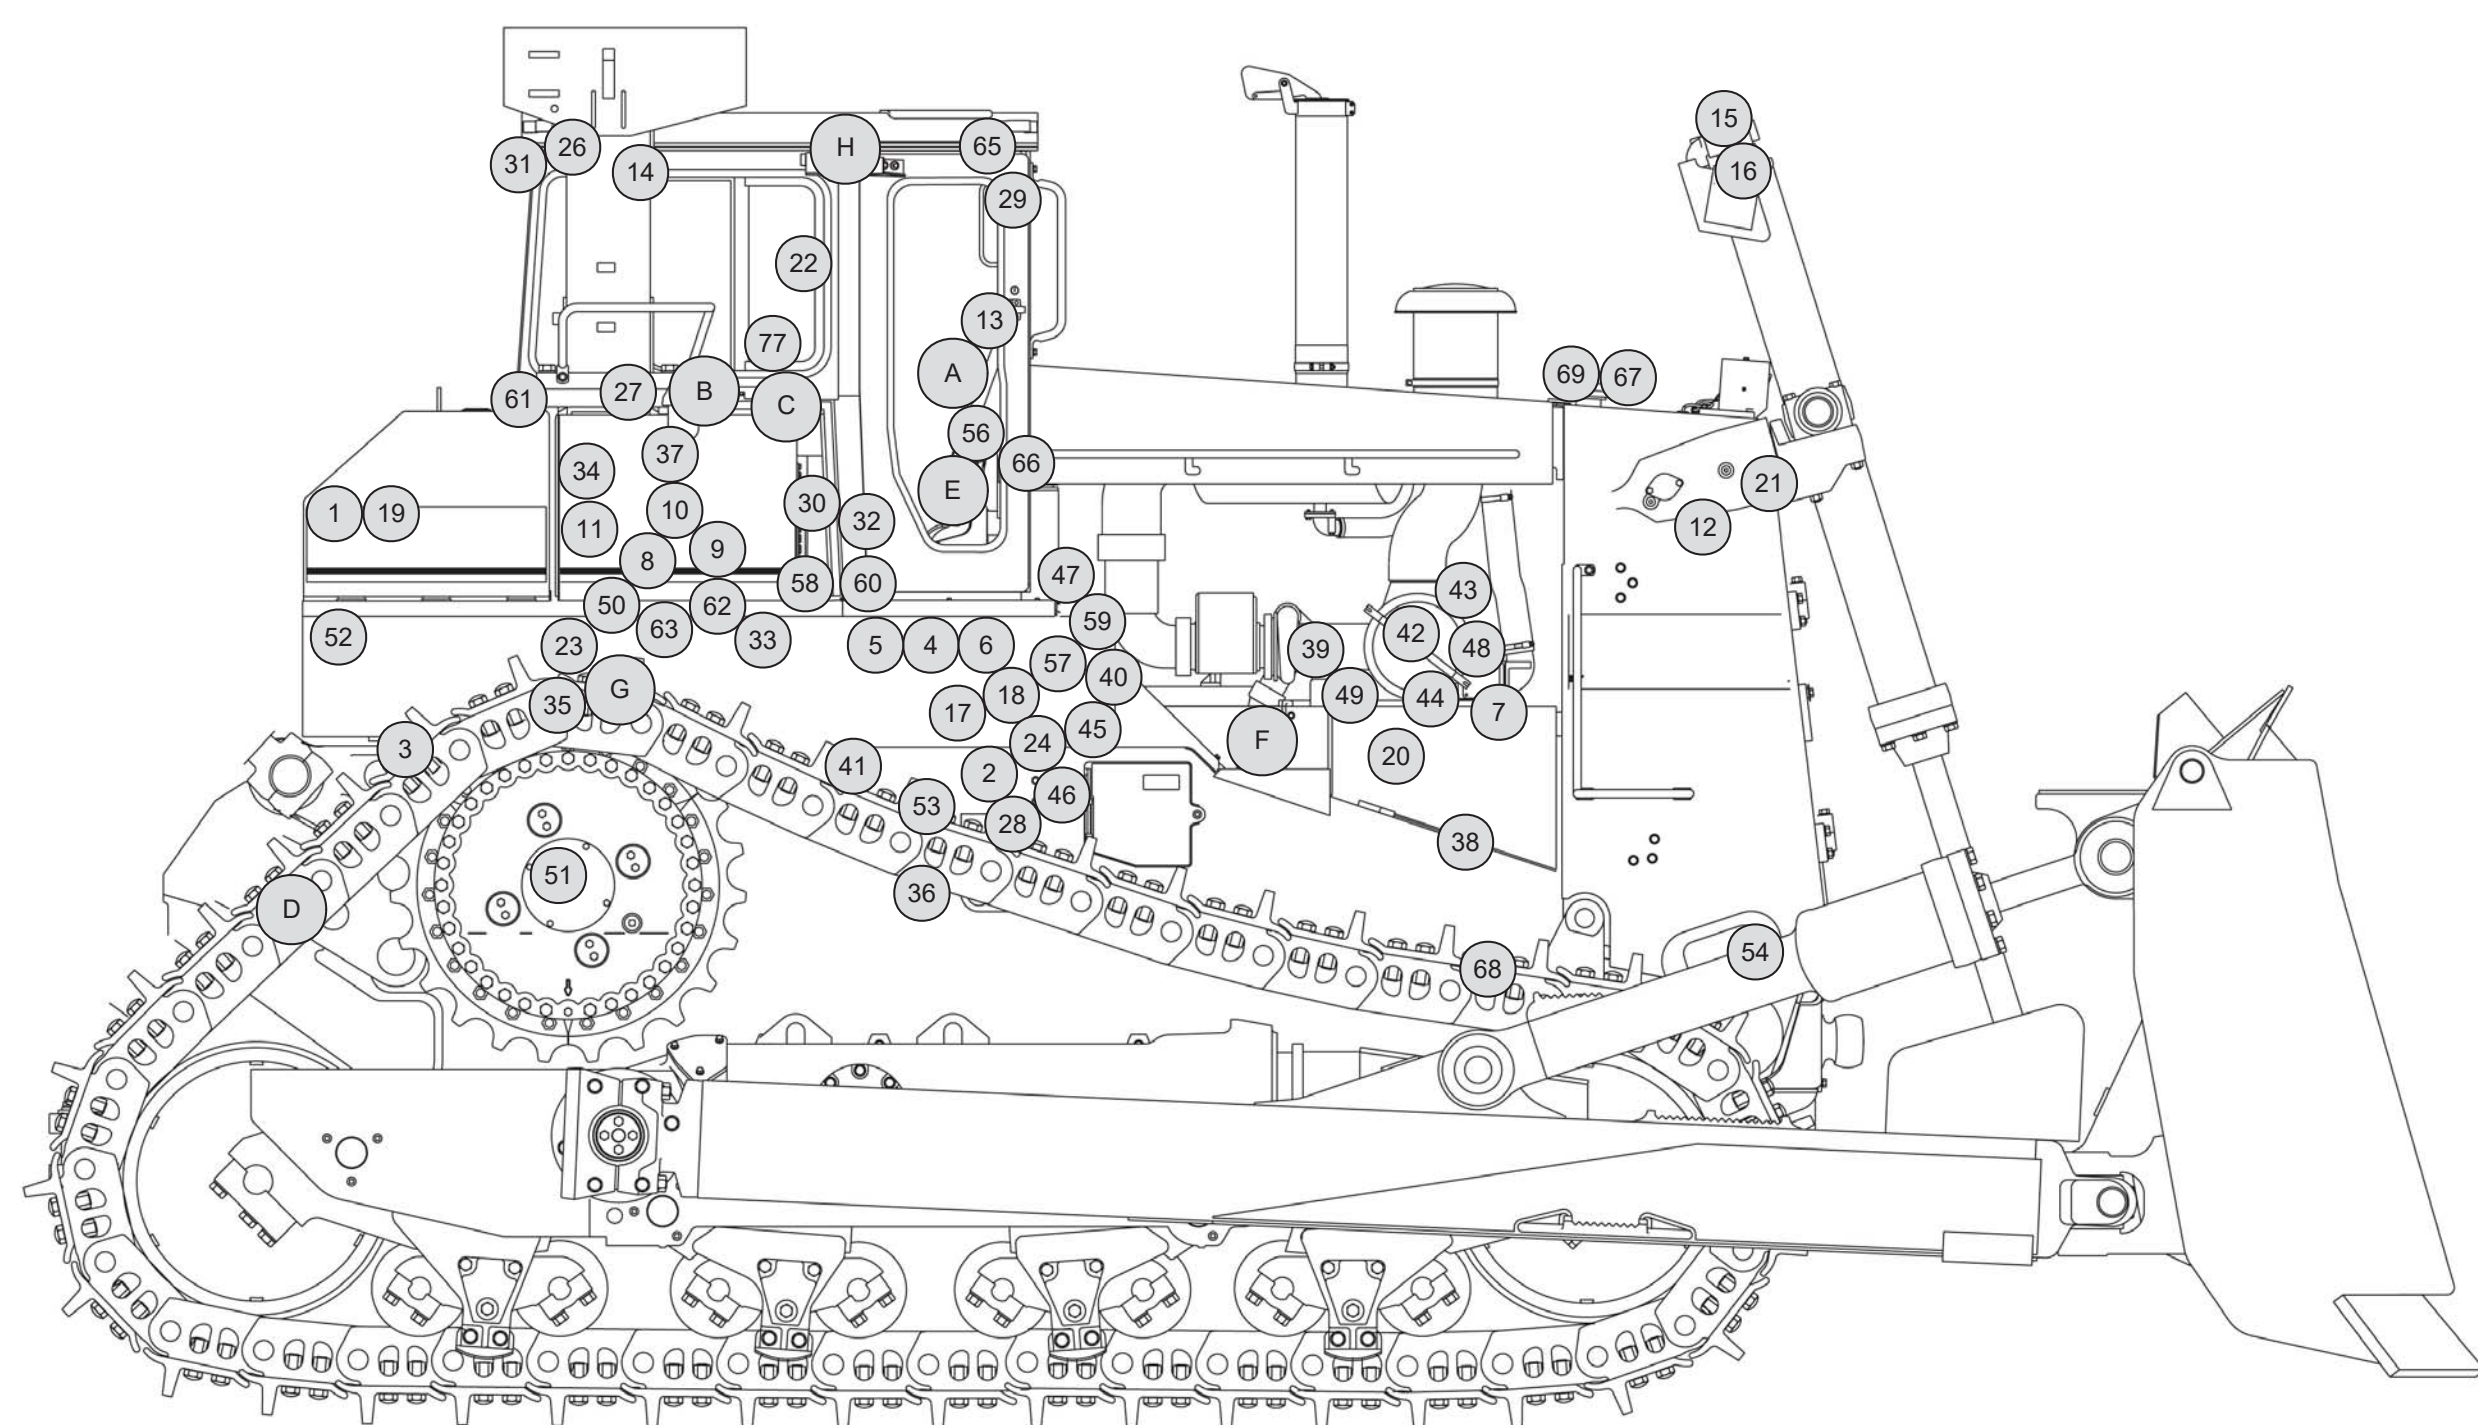


D11R and D11R Carrydozer
Track-Type Tractor
Electrical System

7PZ881-UP
AAF228-UP

Connector Location		
Connector Number	Schematic Location	Machine Location
CON-1	7-1	6
CON-2	7-2	6
CON-3	7-3	6
CON-4	7-4	6
CON-5	7-5	6
CON-6	8-6	61
CON-7	8-7	61
CON-8	8-10	19
CON-9	8-11	19
CON-10	11-10	25
CON-11	11-11	25
CON-12	11-12	25
CON-13	11-13	25
CON-14	11-14	25
CON-15	11-15	25
CON-16	11-16	25
CON-17	11-17	25
CON-18	11-18	25
CON-19	11-19	25
CON-20	11-20	25
CON-21	11-21	25
CON-22	11-22	25
CON-23	11-23	25
CON-24	11-24	25
CON-25	11-25	25
CON-26	11-26	25
CON-27	11-27	25
CON-28	11-28	25
CON-29	11-29	25
CON-30	11-30	25
CON-31	11-31	25
CON-32	11-32	25
CON-33	11-33	25
CON-34	11-34	25
CON-35	11-35	25
CON-36	11-36	25
CON-37	11-37	25
CON-38	11-38	25
CON-39	11-39	25
CON-40	11-40	25
CON-41	11-41	25
CON-42	11-42	25
CON-43	11-43	25
CON-44	11-44	25
CON-45	11-45	25
CON-46	11-46	25
CON-47	11-47	25
CON-48	11-48	25
CON-49	11-49	25
CON-50	11-50	25
CON-51	11-51	25
CON-52	11-52	25
CON-53	11-53	25
CON-54	11-54	25
CON-55	11-55	25
CON-56	11-56	25
CON-57	11-57	25
CON-58	11-58	25
CON-59	11-59	25
CON-60	11-60	25
CON-61	11-61	25
CON-62	11-62	25
CON-63	11-63	25
CON-64	11-64	25
CON-65	11-65	25
CON-66	11-66	25
CON-67	11-67	25
CON-68	11-68	25
CON-69	11-69	25
CON-70	11-70	25
CON-71	11-71	25
CON-72	11-72	25
CON-73	11-73	25
CON-74	11-74	25
CON-75	11-75	25
CON-76	11-76	25
CON-77	11-77	25
CON-78	11-78	25
CON-79	11-79	25
CON-80	11-80	25
CON-81	11-81	25
CON-82	11-82	25
CON-83	11-83	25
CON-84	11-84	25
CON-85	11-85	25
CON-86	11-86	25
CON-87	11-87	25
CON-88	11-88	25
CON-89	11-89	25
CON-90	11-90	25
CON-91	11-91	25
CON-92	11-92	25
CON-93	11-93	25
CON-94	11-94	25
CON-95	11-95	25
CON-96	11-96	25
CON-97	11-97	25
CON-98	11-98	25
CON-99	11-99	25
CON-100	11-100	25

The connectors shown in this chart are for harness to harness connectors. Connectors that join a harness to a component are generally located at or near the component. See the Component Location Chart.

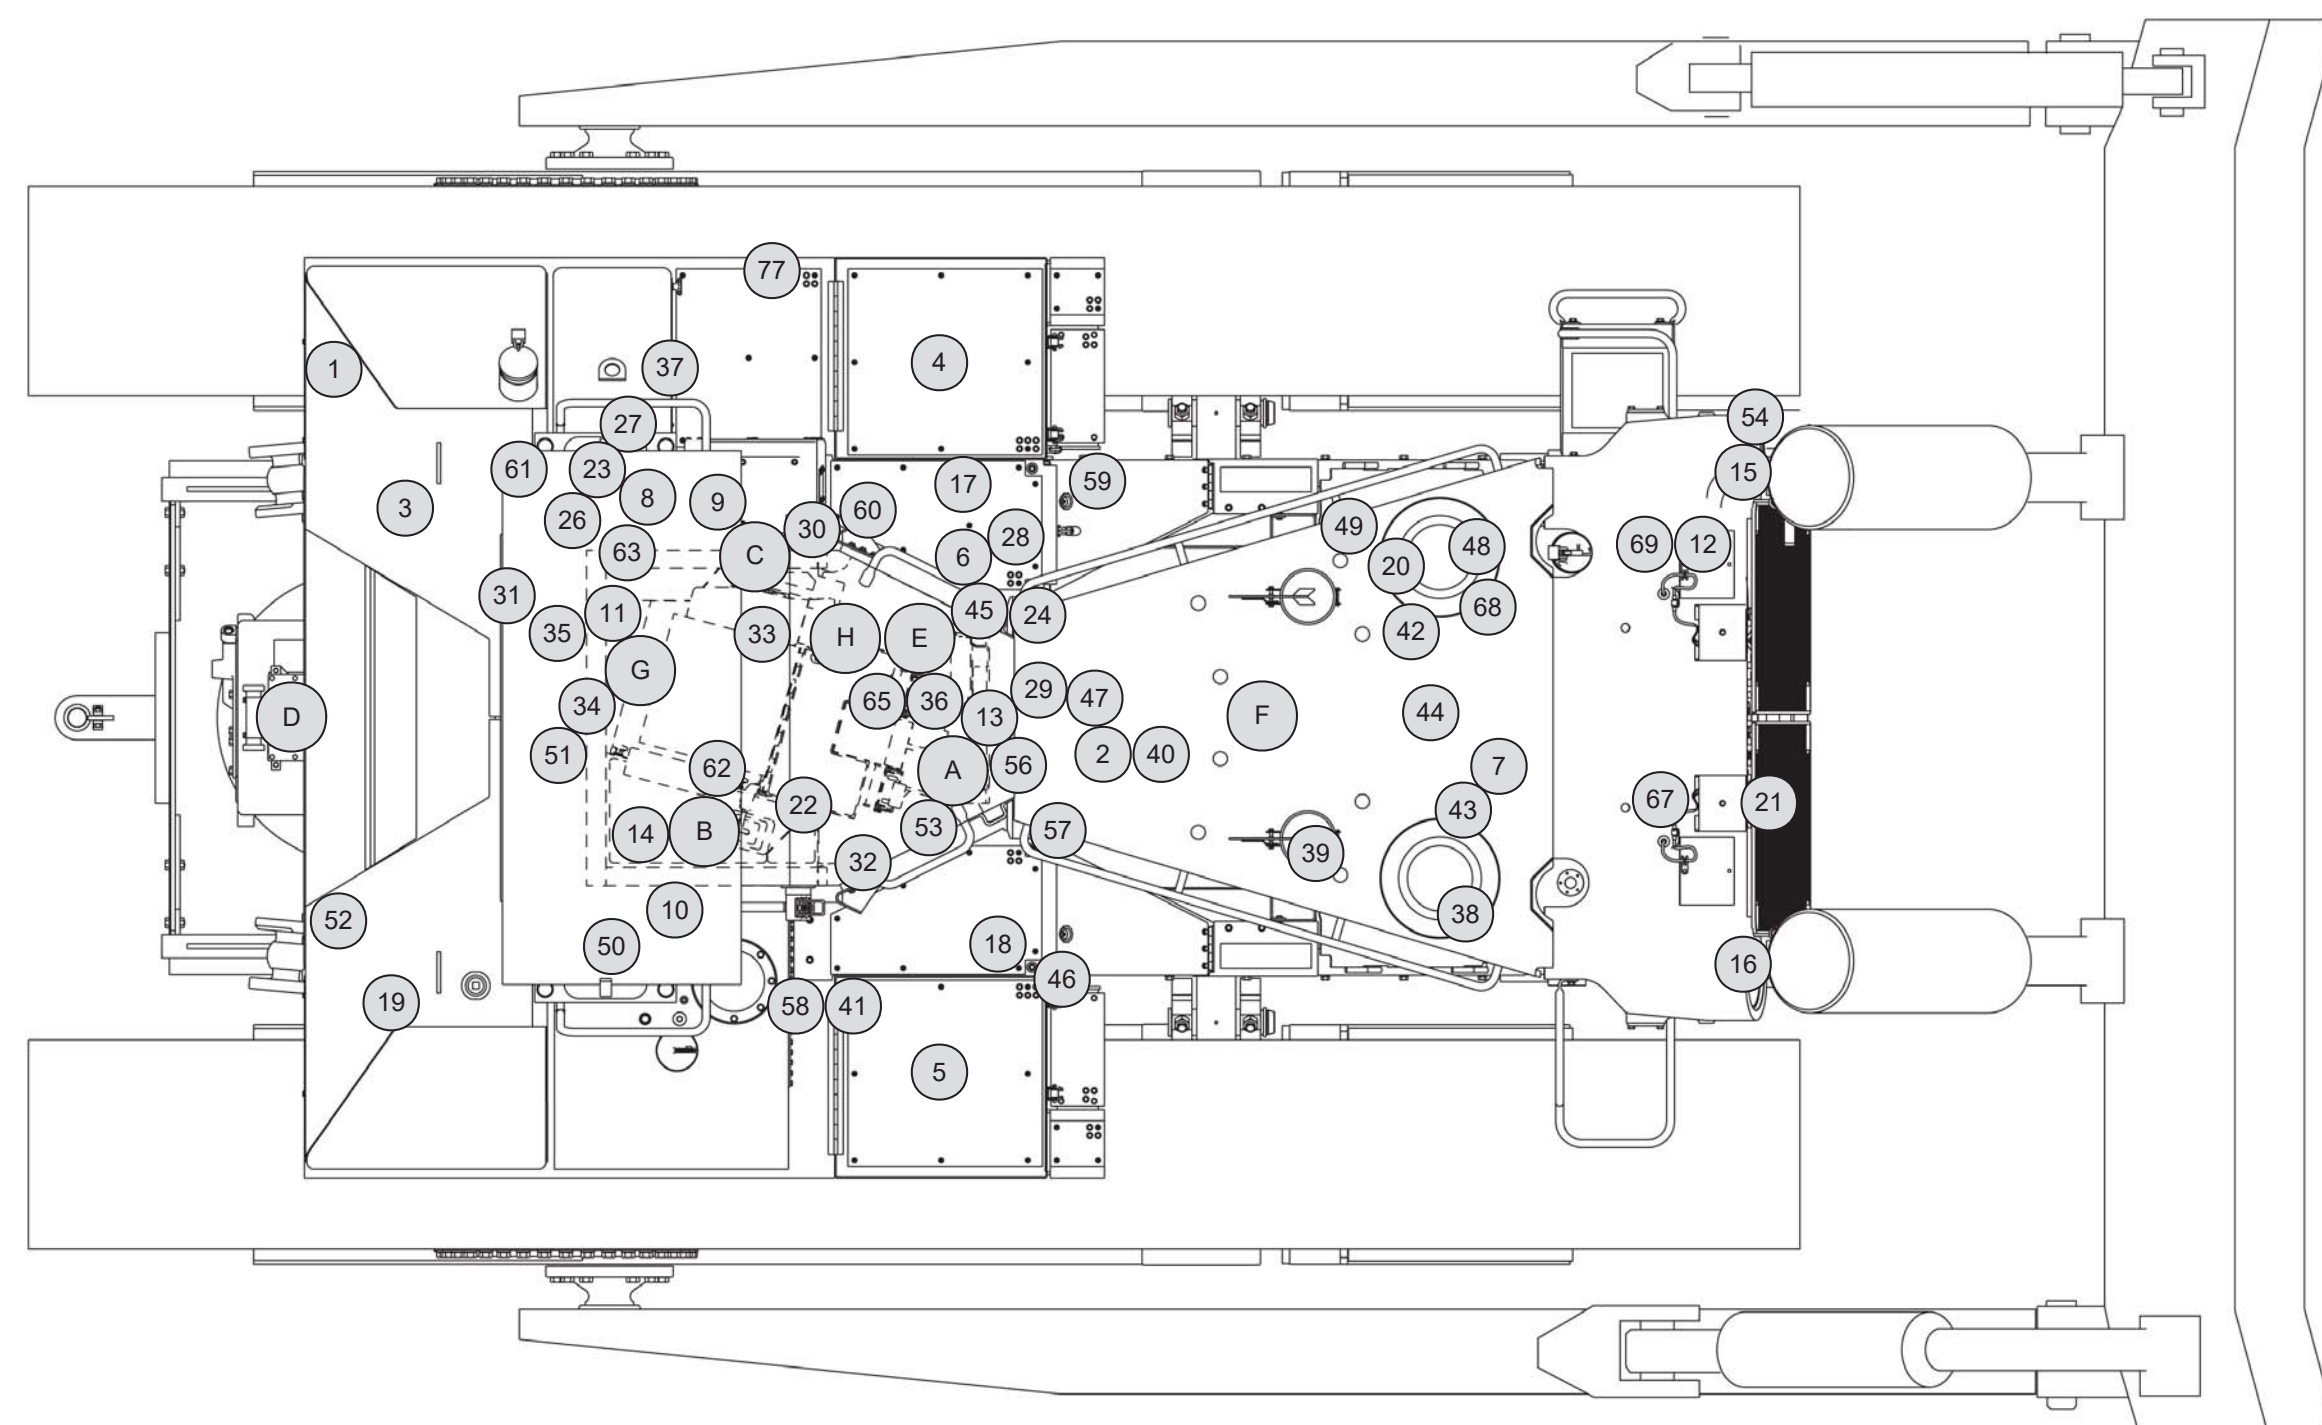


MACHINE HARNESS CONNECTOR AND COMPONENT LOCATIONS


[illegible]

Machine locations are represented by the following:


- A = Located in the dash.
- B = Located in or on the right-hand console.
- C = Located in the left-hand console.
- D = Located in transmission case.
- E = Located lower left of the dash.
- F = Located at each cylinder of the engine.
- G = Located on or around the Electro-Hydraulic Mandrel.
- H = Located on or in the headliner.

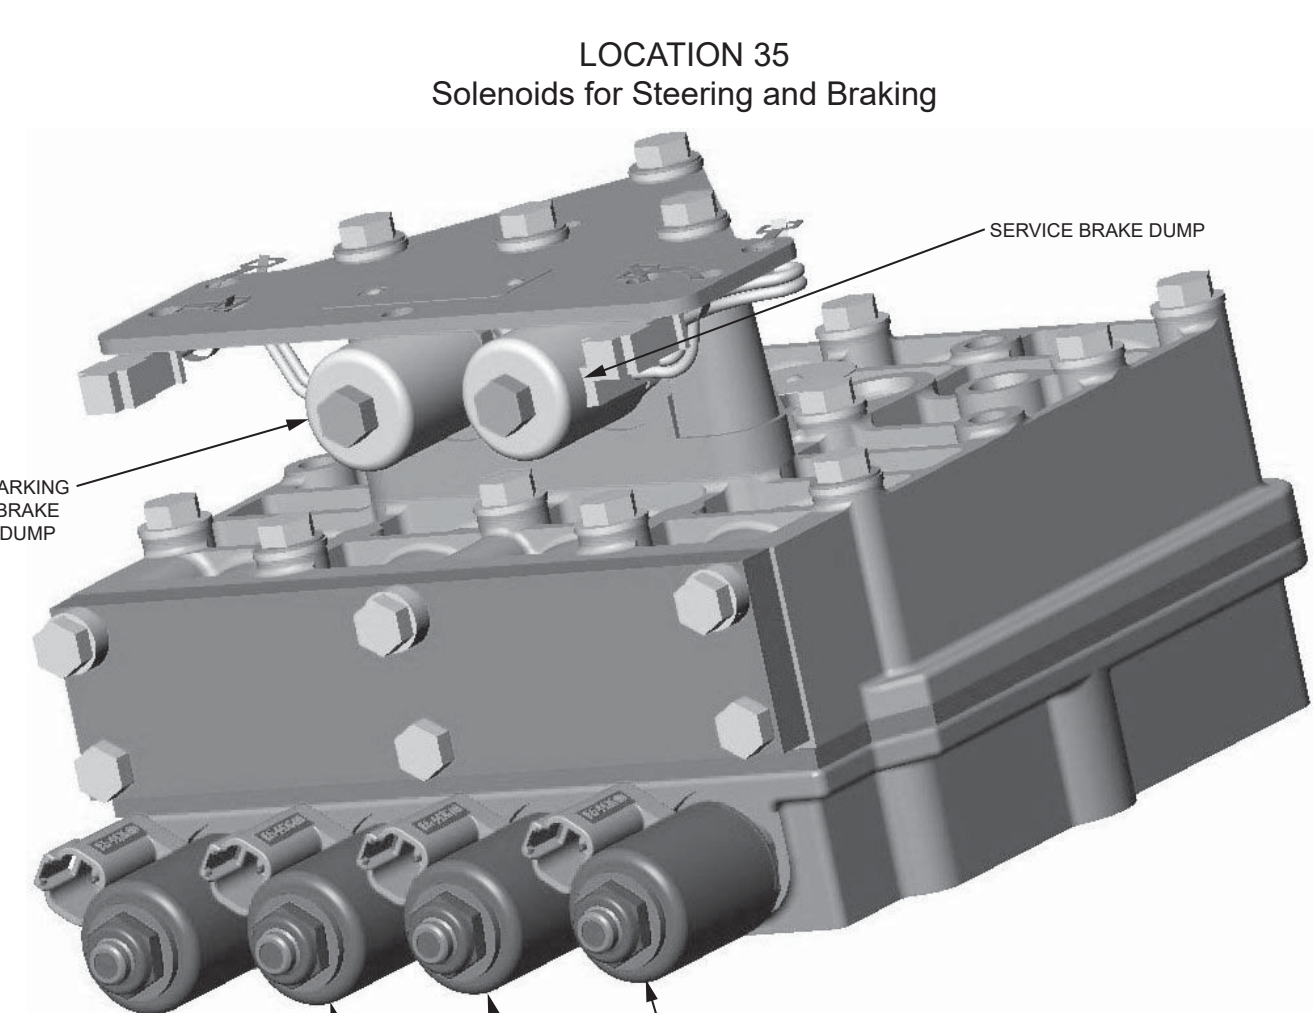

SOLENOIDS FOR STEERING AND BRAKING

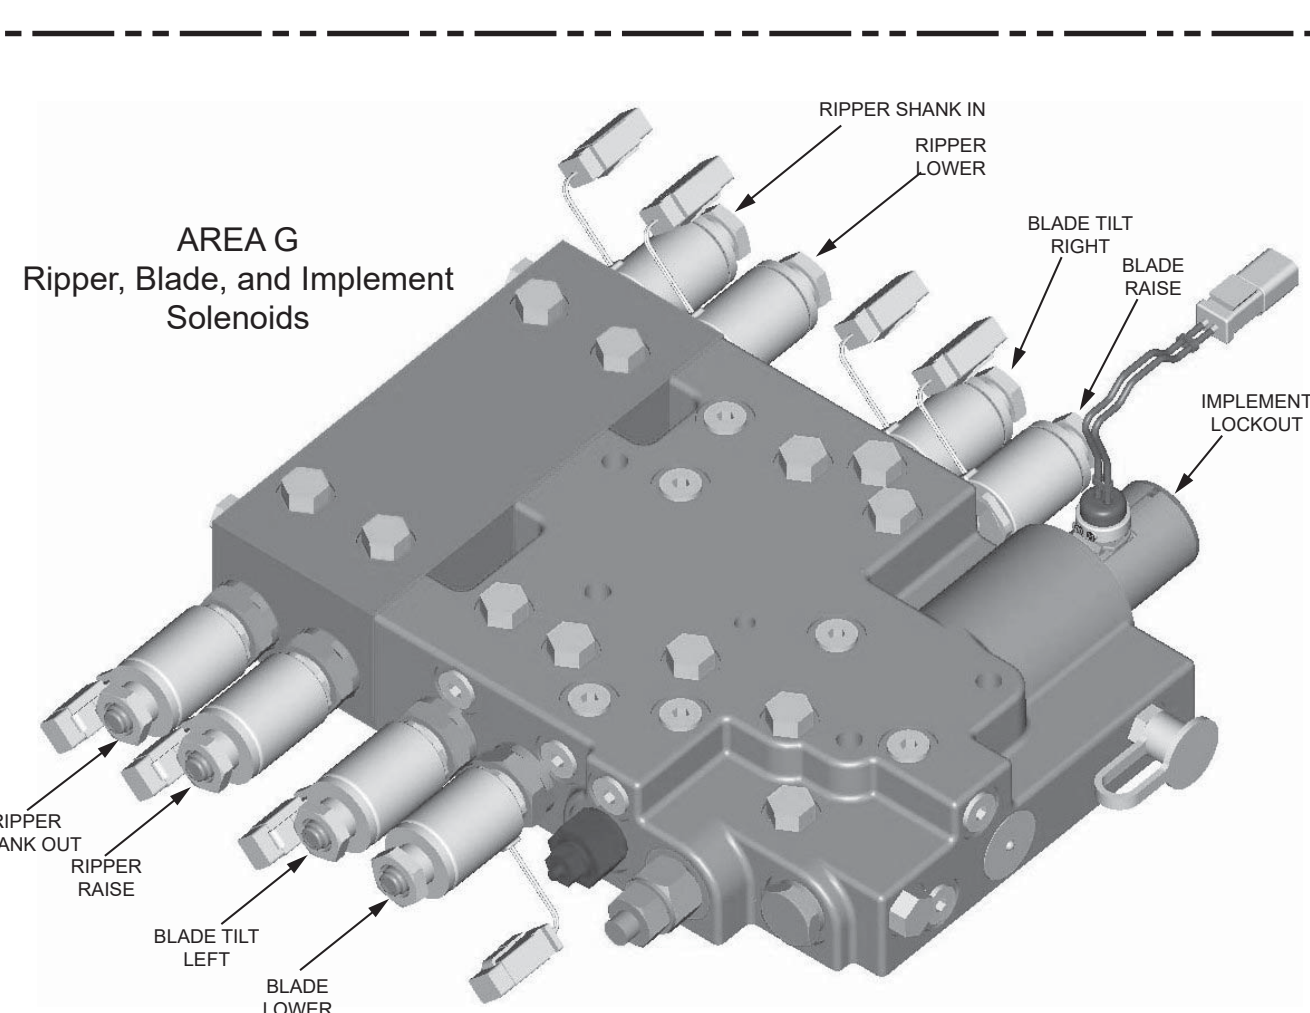

RIPPER, BLADE, AND IMPLEMENT SOLENOIDS

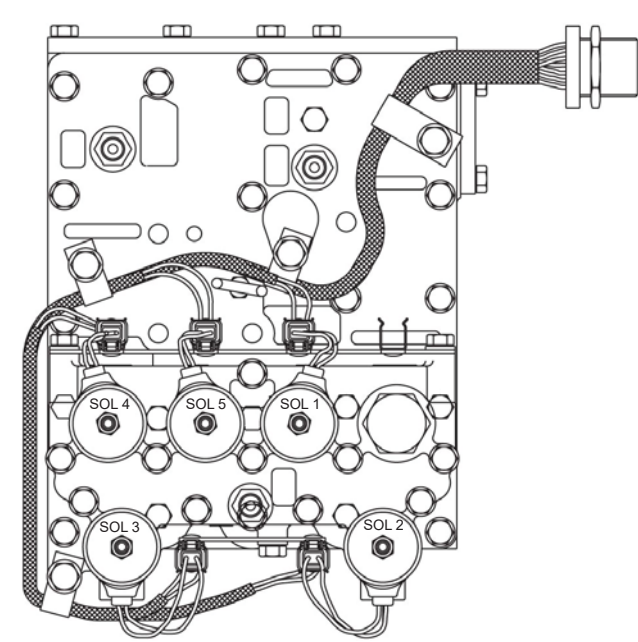

SOLENOID VALVES - TRANSMISSION

